

Usage instructions **IN 6 EASY STEPS**

**1**

Without pulling the trigger turn the spray gun upside-down and place the paint inlet on top of the dedicated cleaning jet.

**2**

Connect the compressed air coupling to the air inlet of the spray gun.

**3**

Using the trigger clamp, keep spray gun trigger in open position. Close auto clean compartment door or lid and set timer to 2-3 minutes.

**4**

Remove trigger clamp and with spray gun still in place, blow it dry using the air blow gun. Do not touch the trigger!

5

Now remove spray gun from auto clean compartment and connect the air coupling of the blow gun to the spray gun. Operate the spray gun to discharge any fluid out into the washer.

6

Finally wipe the spray gun dry with a microfibre cloth and check that there are no fluid residues behind the air cap.

During the entire automatic cleaning process, the spray gun must not be disconnected from the compressed air coupling and the trigger may only be pulled when the gun is correctly seated on the dedicated cleaning jet.

Manual cleaning may only be done with the compressed air coupling of the air blow gun connected to the spray gun, as this is the only source where compressed air flows continuously.

Prior to the next painting cycle, the paint channel and the inside of the air cap must always be free of cleaning fluid.

Failure to follow the application instructions may result in paint problems!

